


agxcel 20

QUICK START GUIDE

LITE TREATER

PN#55720

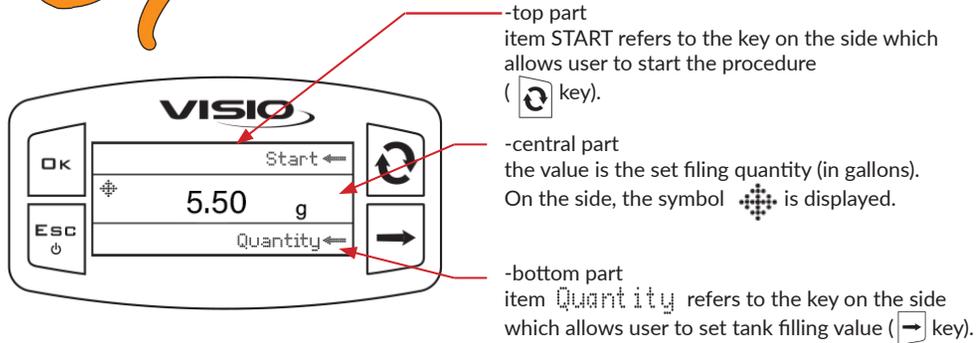

The display shows the following data:
- top part: set filling quantity;
- central part: partial totalizer;
- bottom part: instant flowrate.

Press key several times to view a value in extended mode until required value is displayed in central part.

Displayed values cannot be edited.




1) Press key for 2 seconds to open the manu for setting the filling quantity.



2) Set filling quantity:
A) Press to move through digits.
B) Press a few more time to edit the highlighted digit.
C) Press to save changes, or
D) Press to quit the page without confirming changes.



3) Keep key pressed for 2 seconds. This will start the system.
Filling will begin. The system will stop automatically when completed.

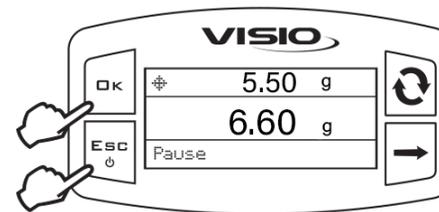

Tank filling can be interrupted at any time by pressing **ESC**. **Pause** message will be shown at the bottom of the display.

Press **OK** to resume filling; press **ESC** to stop filling and display will go back to initial page.



When set quantity is reached, filling stops automatically. **Completed** message will be shown at the bottom of the display.

